




Bat House Kit Instructions

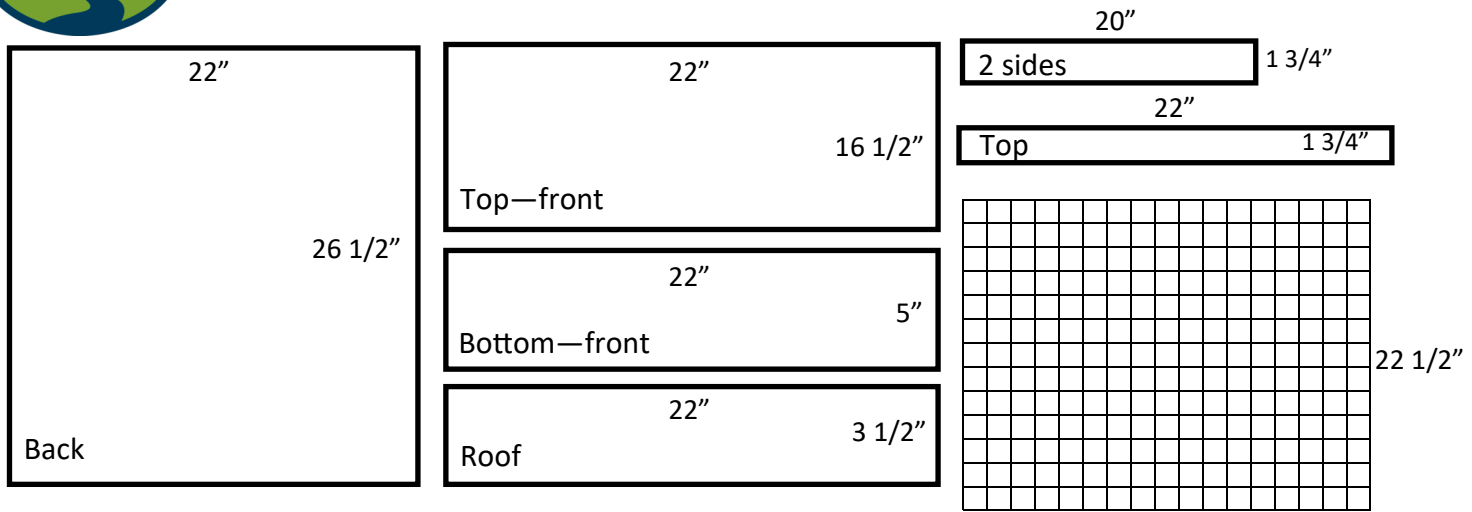

6—1 5/8" screws 30—1" screws *All materials included except for caulk.* Screen

Step 1—Staple screen onto the back of largest board (will not cover entire back)

Step 2—Put a line of caulk around screen where top and side pieces will be attached (see #3)


Step 3—Screw (1" screw) sides and top to the back—for best results flip entire piece over and screw through the back into side and top pieces

Step 4—(flip back over) Put a line of caulk on top of the side and top pieces

Step 5—Line up and screw top/front piece onto top and side pieces (1" screw)

Step 6—Line up the bottom/front piece with the **bottom** of the side pieces (there will be a gap between the bottom and the top) screw into place (1" screw)

Step 7—Screw roof onto the top—leave overhang to the front (1 5/8" screw)

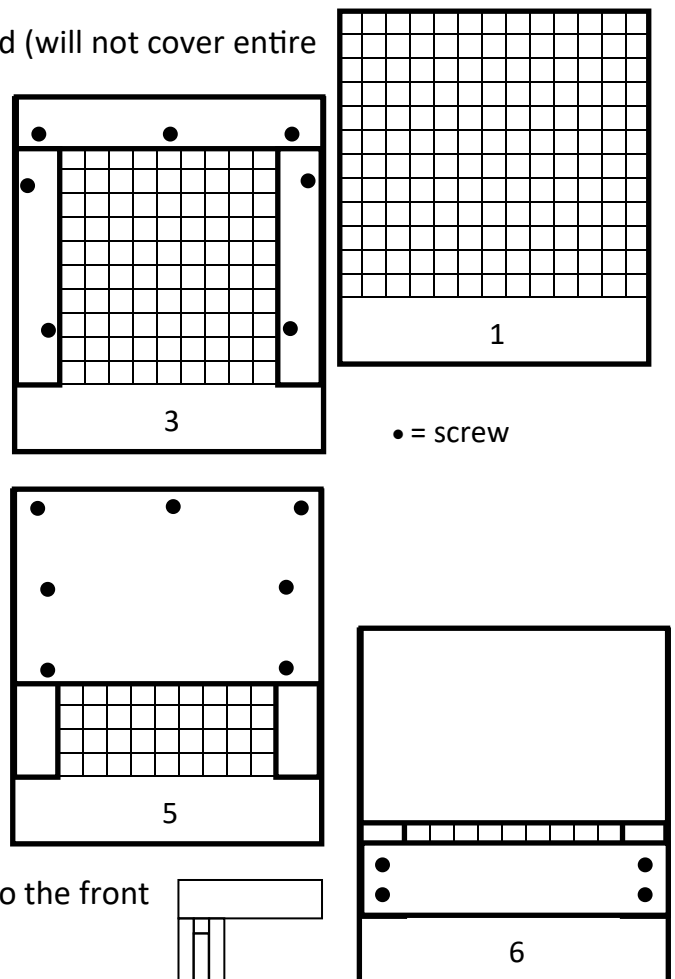

**You will need latex indoor/outdoor caulk—if you skip the caulk then your bat house will leak and be less desirable to the bats.*

